



# Disassembling APEX AP-GS918 Screen

This guide will show you how to safely remove a broken screen.

Written By: Megan Lozicki



## INTRODUCTION

If your screen has become damaged--cracked, scratched, or more--then it is in need of replacement. This guide will show you how to remove the battery and motherboard in order to access your broken screen.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Portable Soldering Iron](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Power/Volume Button



- To begin, locate the two 4.9mm Phillips #00 screws at the top corners of the case and remove them.

## Step 2




- Squeeze the plastic opening tool in between the seam where the screen joins the plastic case.
- Begin separating the bottom of the case from the screen by carefully going around the whole edge of the case and slowly prying it apart.

⚠ Be careful when separating the lids because the wires holding the speaker to the motherboard are very short.




### Step 3

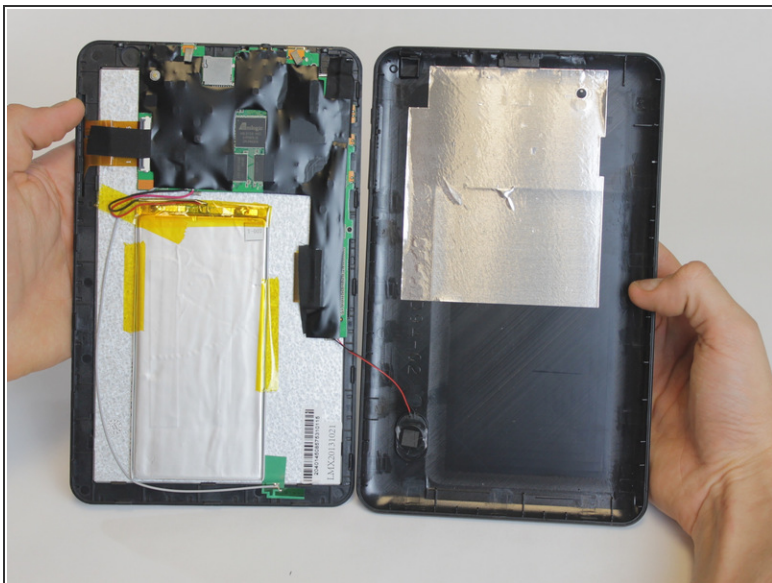


- Carefully place the bottom lid next to the screen case. The power/speaker buttons should be visible at the corner of the lid. Remove the buttons with the tweezers.

### Step 4 — Battery

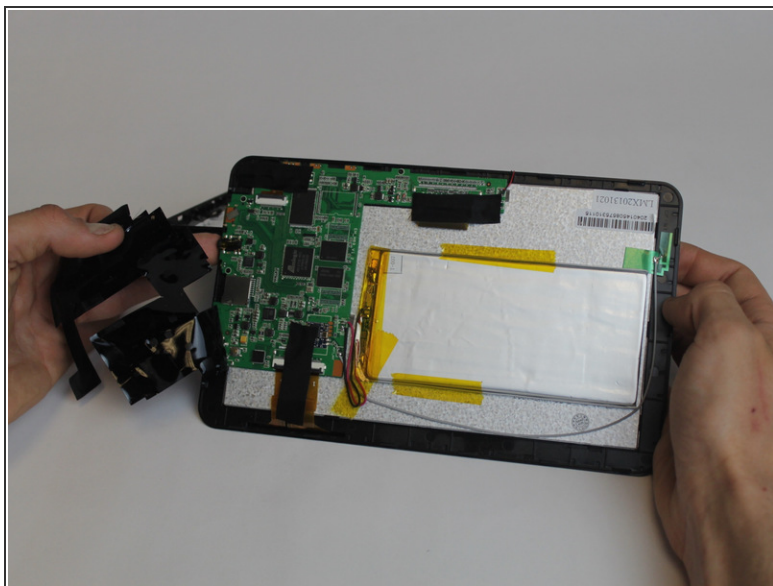

- Begin removing the black tape covering the motherboard inside the tablet.


## Step 5

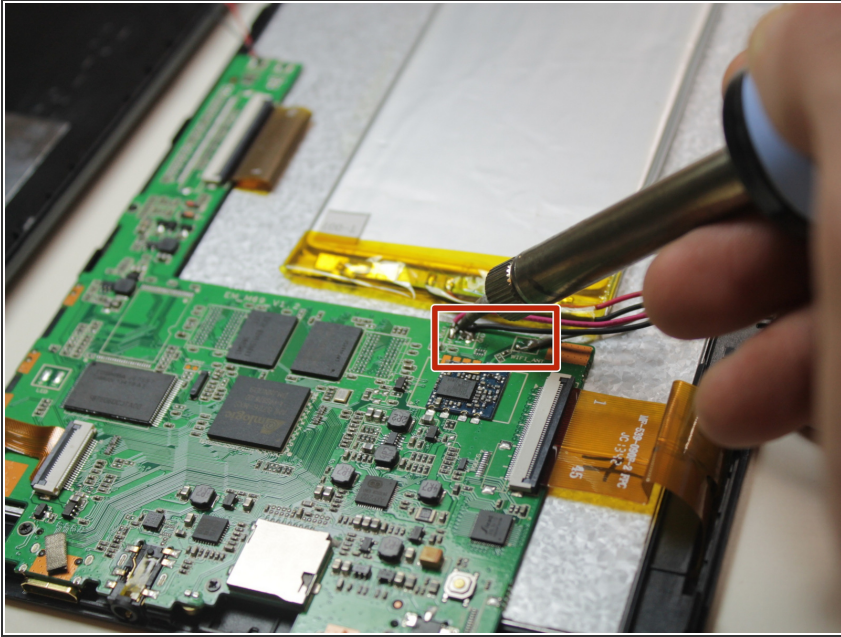

- You will need to desolder the two contact points that connect the battery to the motherboard.
- ⓘ Make sure to allow ample time (at least 5-8 minutes or more) for the soldering iron to heat up. Otherwise, the solder won't melt.
- Touch the hot iron to the contact points and gently pull on the wires to loosen them from the solder. They should release easily.
- ⚠ Make sure not to touch the contact points after desoldering them because they will remain very hot for a short while afterwards.





## Step 6

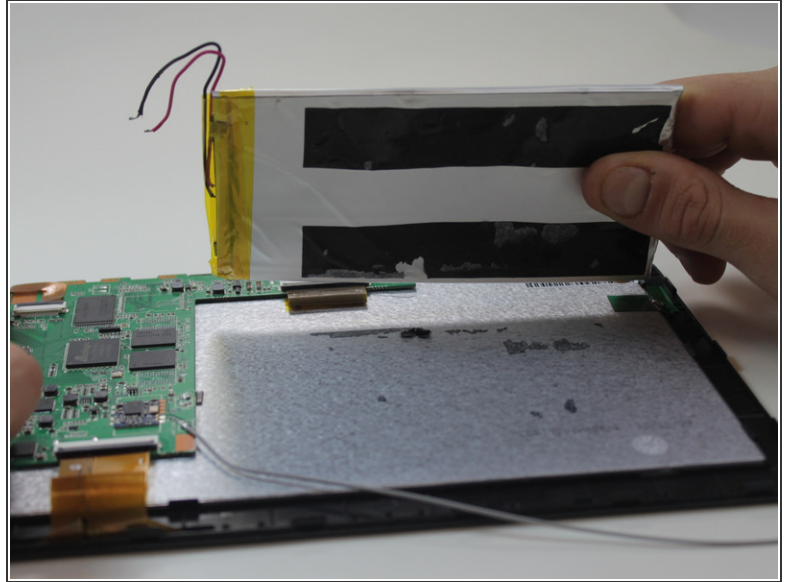

- Using the black nylon spudger, get underneath the battery and begin prying it loose from the rest of the tablet.

**i** The tape holding the battery to the tablet has a very strong hold so be prepared for resistance.



## Step 7 — Screen

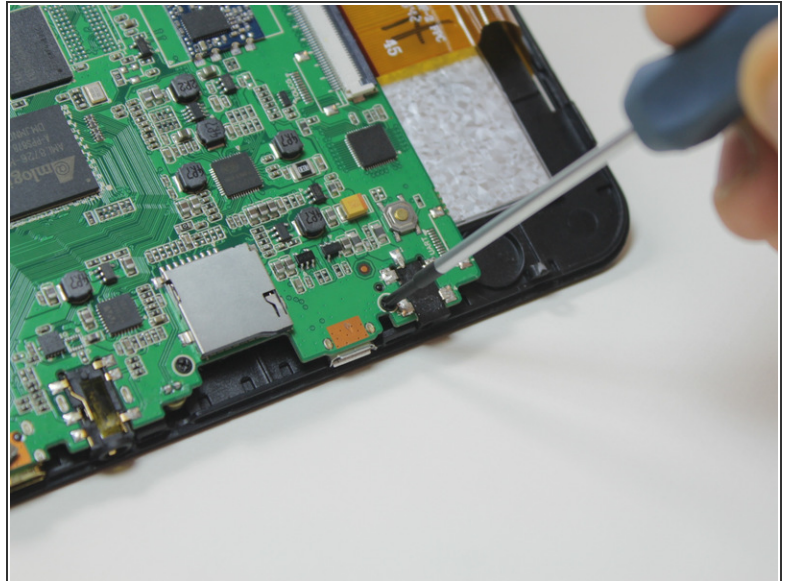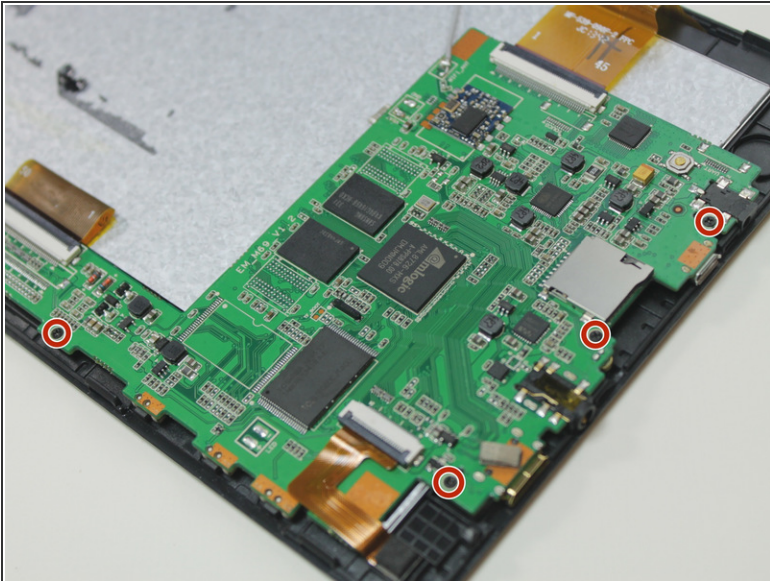

- The motherboard will need to be removed in order to access the screen.
- To remove the motherboard you must first unscrew four 4.9mm Phillips #00 screws.




## Step 8

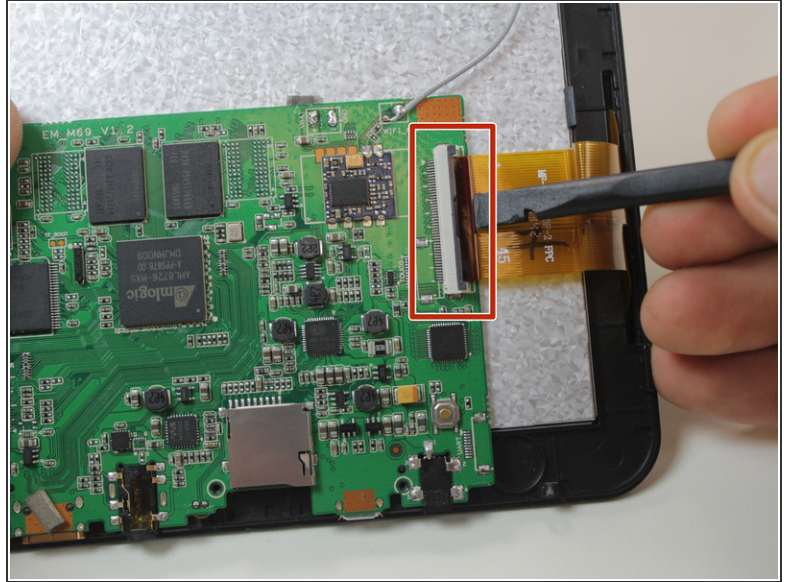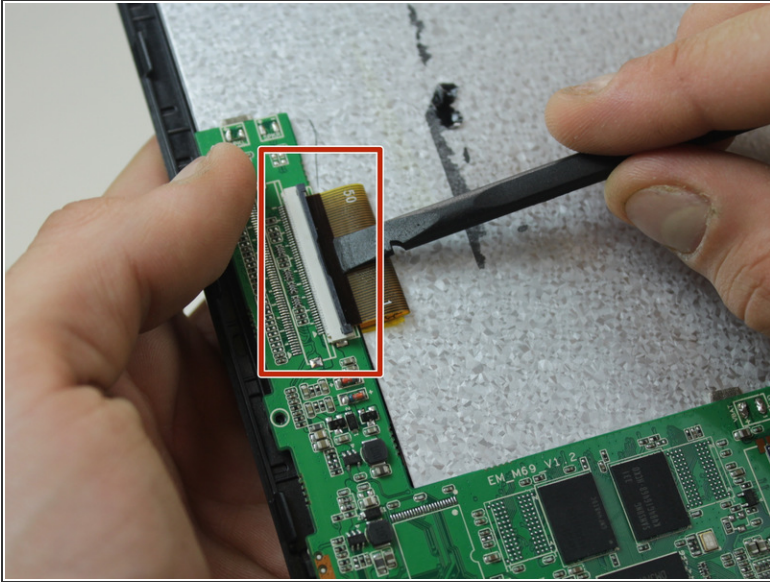


- To finish removing the motherboard you must release the two data cables holding the screen to it.
- Use the black nylon spudger to lift the gray clips up 90° on the white connectors.
- You can now remove the data cables from the slots and lift the motherboard out from the device.

## Step 9

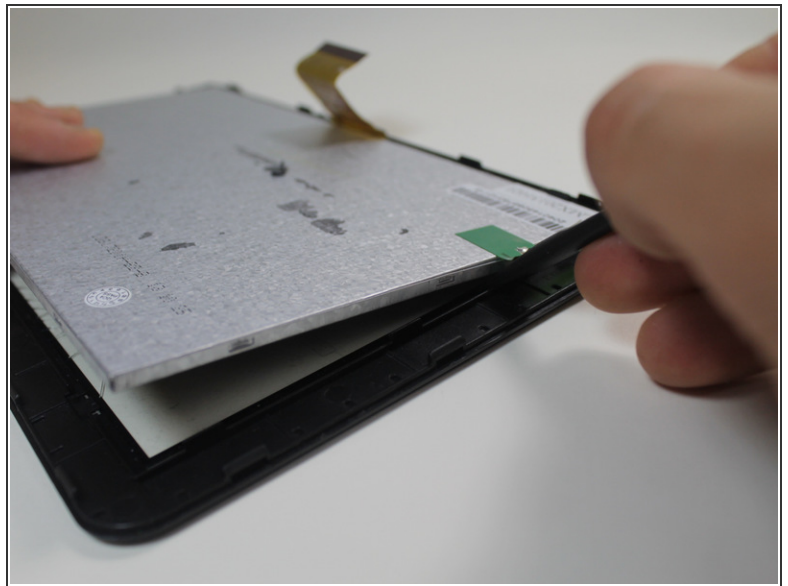

- After removing the motherboard, use the black nylon spudger to pop the screen out of the housing holding it to the front of the screen case.

## Step 10

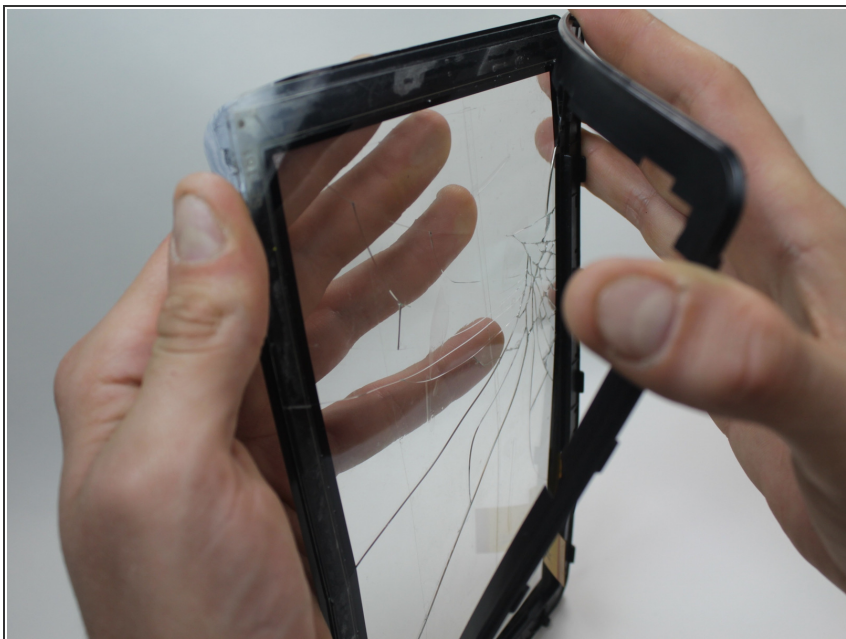

- Pull the thin plastic screen casing apart and you can remove the damaged screen.

---

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 09:13:29 AM.